
 
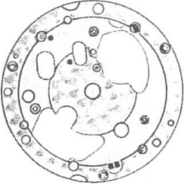 
























 
	N	English
	3135-410	Escape wheel
	3135-419	Pallet staff
	3135-421	Pallet fork
	3135-429	Balance staff
	3135-432	Balance with Breguet hairspring, timed
	3135-450	Stud support
	3135-451	Bridle for stud support
	3135-510	Driving wheel for ratchet wheel
	3135-540	Reversing wheel, mounted
	3135-550	Pinion for oscillating weight
		Spring-clip for oscillating weight:
	3135-560-1	• 0.18mm
	3135-560-2	• 0.160mm
	3135-560-3	• 0.200mm
	3135-561	Bridle for spring-clip

	N°	English
	3135-568	Axle for oscillating weight
	3135-570	Oscillating weight
	3135-600	Date indicator seating
	3135-614	Date jumper
	3135-623	Date finger
	3135-625	Date wheel, mounted
	3135-633	Yoke for cam
	3135-635	Cam yoke spring
	3135-639	Intermediate date corrector wheel

	N°	English
	<b>3135-645</b>	Date corrector
	<b>3135-670</b>	Intermediate date wheel
	<b>3135-5000</b>	Set of screws
	<b>3135-5013</b>	Dial screw
	<b>3135-5044</b>	Minute wheel stud
	<b>3135-5100</b>	Screw for case
	<b>3135-5110</b>	<p>Screw for:</p> <ul style="list-style-type: none"> <li>• Balance guard</li> <li>• Balance bridge</li> <li>• Winding bridge</li> <li>• Automatic device lower bridge</li> <li>• Automatic device bridge, upper</li> <li>• Barrel bridge</li> <li>• Train wheel bridge</li> </ul>
	<b>3135-5115</b>	<p>Screw for:</p> <ul style="list-style-type: none"> <li>• Bridle of spring-clip</li> <li>• Bridle for stud holder</li> <li>• Click</li> <li>• Setting-lever spring</li> <li>• Setting-lever jumper</li> <li>• Minute pinion bridge</li> <li>• Pallet bridge</li> <li>• Mechanism cover</li> </ul>

	N°	English
	<b>3135-5120</b>	Regulating nut for balance bridge height adjustment
	<b>3135-5210</b>	Screw for: • Crown wheel • Ratchet wheel
	<b>3135-5213</b>	Screw for intermediate crown wheel
	<b>3135-5452</b>	Screw for hairspring clamp
	<b>3135-5600</b>	Screw for date indicator seating
	<b>3135-5625</b>	Screw for date wheel
	<b>3135-7115</b>	Tapped foot for pallet bridge
	<b>3135-7120</b>	Tapped foot of balance bridge
	<b>3135-7240</b>	Yoke stud
	<b>3135-7250</b>	Setting-wheel ring
	<b>3135-7600</b>	Foot for date indicator seating
	<b>3135-7625</b>	Tapped foot for date wheel

	N°	English
	<b>3135-7635</b>	Stud for came yoke spring
	<b>3135-9310</b>	Jewel for barrel arbor-upper
	<b>3135-9311</b>	Jewel for barrel arbor-lower
	<b>3135-9319</b>	Bush for minute pinion-lower
	<b>3135-9330</b>	Jewel for great wheel-upper /lower
	<b>3135-9335</b>	In-setting for minute pinion-upper
	<b>3135-9340</b>	Jewel for third wheel-upper /lower
	<b>3135-9360</b>	Jewel for second wheel-upper
	<b>3135-9421</b>	Jewel for pallet fork-upper /lower
	<b>3135-9510</b>	Jewel for driving wheel for ratchet wheel support
	<b>3135-9511</b>	Jewel for driving wheel for ratchet wheel-lower
	<b>3135-9570</b>	Jewel for oscillating weight-upper
	<b>3135-9571</b>	Jewel for oscillating weight-lower
	<b>3135-9633</b>	Jewel for cam yoke

	N°	English
	<b>3135-9670</b>	Jewel for intermediate date wheel-upper /lower
		Date indicator,
	<b>3135-16100</b>	champagne
	<b>3135-16101</b>	• champagne, arabic/persian
	<b>3135-16102</b>	• champagne, chinese
	<b>3135-16103</b>	• champagne, persian
	<b>3135-16104</b>	• champagne, modern chinese
		Date indicator,
	<b>3135-16200</b>	• white
	<b>3135-16201</b>	• white, arabic/persian
	<b>3135-16202</b>	• white, chinese
	<b>3135-16203</b>	• white, persian
	<b>3135-16204</b>	• white, modern chinese
	<b>3135-16205</b>	• white, red numbers
	<b>3135-16206</b>	• white, even numbers black, odd numbers red
	<b>3135-16500</b>	• pink
	<b>3186-432</b>	Balance with PARACHROM Breguet hairspring, timed Depends on model reference, see R20