

**SEIKO
LASSALE**

QUARTZ

Cal. 7750A

**PARTS
CATALOGUE**

Cal. 7750A



125 376



231 371



241 375



261 370



270 376



271 373



281 370



282 371



354 371



383 371



384 371



387 371



388 371



391 370



491 141



493 260




701 370



766 370



4001 421




4002 370



4146 370



4219 370

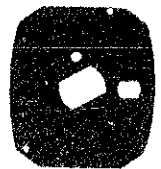

4219 371



4239 370




4259 370



4270 370












4299 022



4408 370



SEIKO TR916SW

				
012 491	012 492	012 794	012 795	017 570
				
017 659	017 660	017 661	017 972	$\frac{2}{1}$

Cal. 7750A

Characteristics

Casing diameter : 22.0 × 20.0 mm
 Maximum height : 1.5 mm without battery
 Jewels : 6 j
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz Cycles per second)
 Driving system : Step motor (2 poles)
 Regulation system : Trimmer condenser
 Train wheel setting

PART NO.	PART NAME	PART NO.	PART NAME
125 376	Train wheel bridge	017 660	Tube for circuit block screw (B)
231 371	Third wheel & pinion	017 661	Tube for train wheel bridge
241 375	Fourth wheel & pinion	017 972	Eccentric dial pin
261 370	Minute wheel	SEIKO TR916SW	Silver (II) oxide battery
270 376	Center minute wheel with cannon pinion (Silver)	Maxell SR916SW	Silver oxide battery
270 377	Center minute wheel with cannon pinion (Gold plated)		
271 373	Hour wheel		
281 370	Setting wheel		
282 371	Clutch wheel		
354 371	Winding stem		
383 371	Setting lever		
384 371	Yoke		
387 371	Minute wheel bridge		
388 371	Setting lever spring		
391 370	Train wheel setting lever		
491 141	Dial washer		
493 260	Hour wheel ring (Thickness 0.03 mm)		
493 261	Hour wheel ring (Thickness 0.05 mm)		
493 262	Hour wheel ring (Thickness 0.07 mm)		
493 371	Hour wheel ring (Thickness 0.01 mm)		
701 370	Fifth wheel & pinion		
766 370	Intermediate minute wheel		
4001 421	Circuit block		
4002 370	Coil block		
4146 370	Step rotor		
4219 370	Battery connection insulator (A)		
4219 371	Battery connection insulator (B)		
4239 370	Rotor stator		
4259 370	Ant-magnetic shield plate		
4270 370	Battery connection (-)		
4299 022	Battery lower plate		
4408 370	Insulating spacer for circuit block		
011 333	Upper hole jewel for third wheel		
011 333	Upper hole jewel for fifth wheel		
011 409	Lower hole jewel for step rotor		
011 527	Lower hole jewel for fifth wheel		
011 541	Upper hole jewel for fourth wheel		
011 541	Upper hole jewel for step rotor		
012 491	Train wheel bridge screw		
012 491	Circuit block screw		
012 492	Setting lever spring screw		
012 794	Coil block screw		
012 795	Minute wheel bridge		
017 570	Minute wheel pin		
017 659	Tube for circuit block screw (A)		

Part numbers in light letters are not shown in photos.