



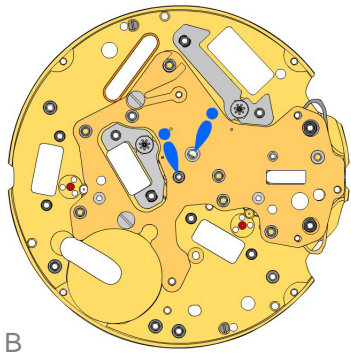


















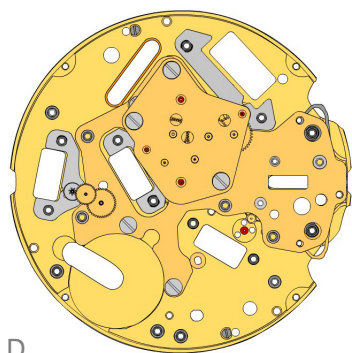
2000.700.G 1.		Main plate
3406.038 2.		Pusher jumper A Put the yellow jumper between the two posts on the closer side.
3406.030 3.		Pusher jumper B Put the grey jumper between the two posts on the further side.
3305.364.CO 4.		Canon pinion (Aig.1)

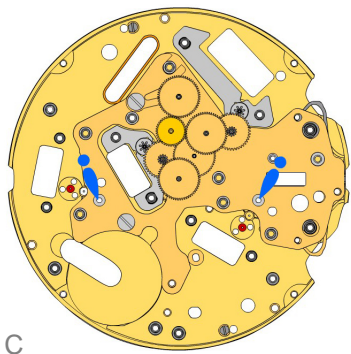


2030.029 5.		Center bridge Center bride held by 2 screws 4000.250.
4000.250 6.		Screw
3406.040 7.		Friction spring Friction spring held by 1 screw 4000.250.
4000.250 8.		Screw
3622.055 9.		Stator
3622.054 10.		Stator chrono Mark 1 on stator.
3715.119.RK 11.		Rotor
3715.119.RK 12.		Rotor



3147.073.CO 13.		Intermediate wheel
3147.074.CO 14.		Intermediate wheel chrono
3122.067.CO 15.		Third wheel
3136.180.CO 16.		Chronograph wheel
3136.179.CO 17.		Second wheel
3136.178.CO 18.		Small second wheel
3004.203.CO 19.		Reverse wheel




D


2020.188.G
20.  **Train wheel bridge**
Train wheel bridge held by 2 screws 4000.250.


4000.250
21.  **Screw**

3622.039
22.  **Stator**


3402.012.CO
23.  **Minute counting wheel (30min)**

3715.120.RK
24.  **Rotor**

3147.076.CO
25.  **Intermediate wheel (counter 30min)**

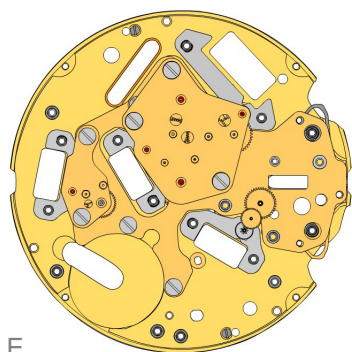


E


2020.191.G
26.  **Counter train wheel bridge (9h30)**
Train wheel bridge held by 2 screws 40000.250. Mark [2].


4000.250
27.  **Screw**

3622.039
28.  **Stator**


3402.013.CO
29.  **Counting wheel (1/10 s)**

3715.120.RK
30.  **Rotor**

3147.075.CO
31.  **Intermediate wheel (counter 1/10 s)**

2020.190.G
32.  **Counter train wheel bridge (2h30)**
Train wheel bridge held by 2 screws 40000.250. Mark [2].

4000.250
33.  **Screw**

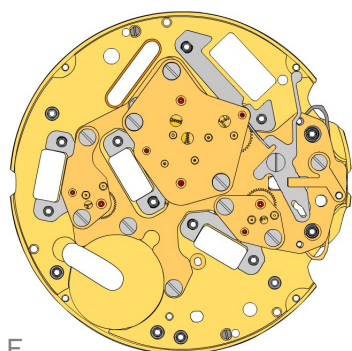


F






3016.029
34.  **Stop lever**
Stop lever held by 1 screw 4000.249.


4000.249
35.  **Screw**

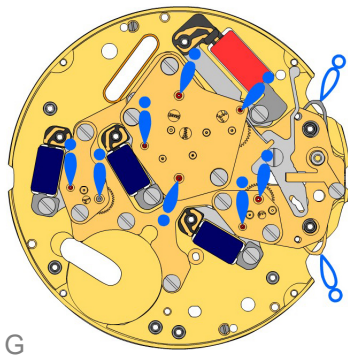






2130.222
36.  **Maintaining plate**
Maintaining plate held by 1 screw 4000.248

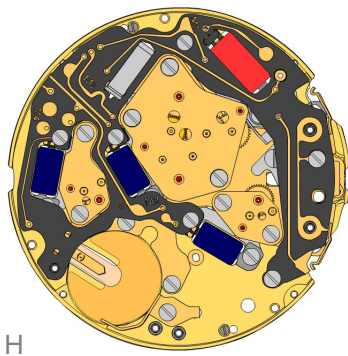
4000.248
37.  **Screw**







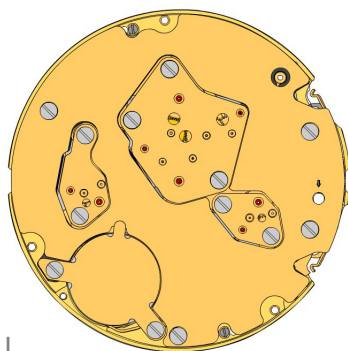


3621.072.RK 38.		Coil Attention: Please don't hold the coil on the black side. Else the wire support can break.
3621.055.RK 39.		Coil counter Attention: Please don't hold the coils on the black side. Else the wire support can break.
3621.055.RK 40.		Coil counter Attention: Please don't hold the coils on the black side. Else the wire support can break.
3621.055.RK 41.		Coil counter Attention: Please don't hold the coils on the black side. Else the wire support can break.
4000.250 42.		Screw




3603.089 43.		Battery insulator
3601.134 44.		Pusher contact spring
3612.218 45.		Electronic module Electronic module held by 6 screws.
4000.248 46.		Screw 4 screws 4000.248 for pressing the module on the coils.
4000.250 47.		Screw 2 screws 4000.248 for pressing the module on the 2 posts.
3601.132.G 48.		Lateral bridle Lateral bridle held by 1 screw 4000.250.
4000.250 49.		Screw




3603.090 50.		Circuit insulator
2130.206.G.M01.8040B 51.		Electronic module cover Electronic module cover held by 4 screws 4000.250
4000.250 52.		Screw
3600.010.HGF 53.		Battery 395
3601.133.G 54.		Bridle + Bridle + held by 2 screws 4000.250.
4000.250 55.		Screw

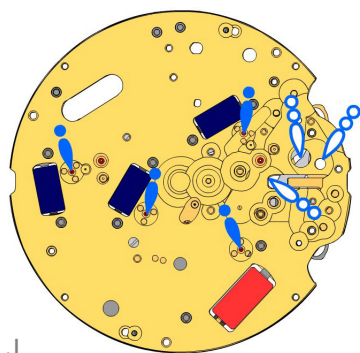

J

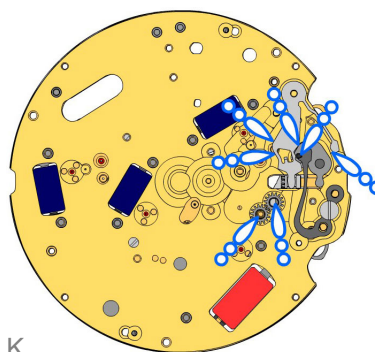

K

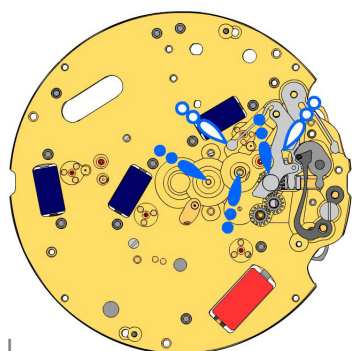

L

 2000.700.G
56.


Main plate

 3017.054.CO
57.


Setting lever

 3001.046
58.


Sliding pinion

 3015.088
59.


Yoke

 3905.063
60.

 Setting lever jumper
Lever held by 1 screw 4000.282

 4000.282
61.


Screw

 3004.200
62.



Corrector setting wheel

 3004.200
63.



Corrector setting wheel

 3015.087.CO
64.



Setting wheel yoke

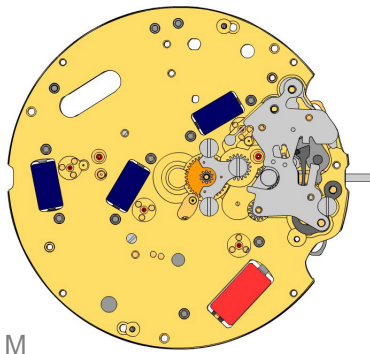



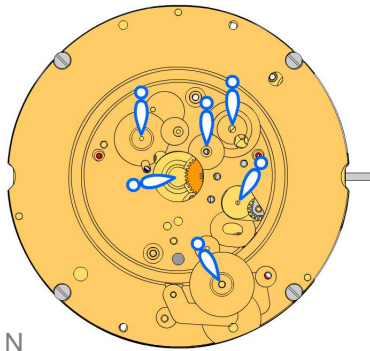




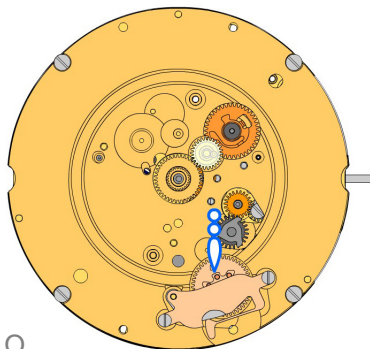



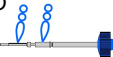


M




N



O

2130.208 65.		Setting mechanism cover Setting meca cover held by 4 screws 4000.305.
4000.305 66.		Screw
3000.203.CO 67.		Setting stem Attention on the right position of the sliding pinion.
3004.222 68.		Intermediate setting wheel
3007.079.CO 69.		Minute wheel
2130.209 70.		Minute train bridge Minute train bridge held by 3 screws 4000.278.
4000.278 71.		Screw
2000.671.G 72.		Main plate retro Minute train bridge held by 4 screws 4000.248.
4000.248 73.		Screw
3004.220 74.		Tens indicator driving wheel The short tooth of the tens indicator driving wheel must point to the center of the movement.
3500.072 75.		Tens jumper
2130.187 76.		Tens jumper maintaining plate Tens jumper maintaining plate held by 2 screws 4000.279. Tensioning the spring arm.
4000.279 77.		Screw
3301.292.CO 78.		Hour wheel
3004.208.CO 79.		Date indicator driving wheel
3147.061 80.		Intermediate date wheel

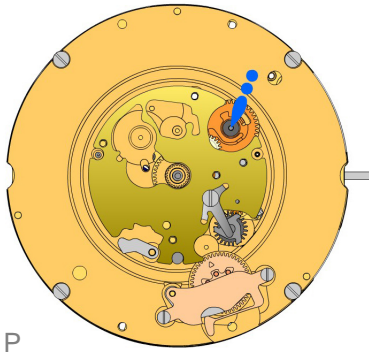





P














Q








R

2130.188 81.		Date indicator plate
3905.068 82.		Date corrector spring Date corrector spring held by 1 screw 4000.244.
4000.244 83.		Screw
3500.068 84.		Date jumper


3504.229.AF.1.A 85.		Units indicator (standard) Nick of the indicator at 3 o'clock.
2130.189 86.		Date indicator maintaining plate Date indicator maintaining plate held by 1 screw.
4000.250 87.		Screw
3905.064 88.		Date jumper spring Insert the date jumper spring in the previous opening.
3147.062 89.		Tens intermediate wheel Position of the teeth has to be in front of the tens indicator driving wheel pin.

3504.230.AF.1.A 90.		Tens indicator (standard) Nick of the indicator at 3 o'clock.
3315.003 91.		Friction spring
2130.190.G 92.		Date mechanism maintaining plate Date mechanism maintaining plate held by 3 screws 4000.320.
4000.320 93.		Screw
3506.077.G 94.		Intermediate Dial support Polished version first.
3506.076.G 95.		Dial support

8200 96.		Moebius 8200
9014 97.		Moebius 9014
124 98.		Jismaa 124
9020 99.		Moebius 9020

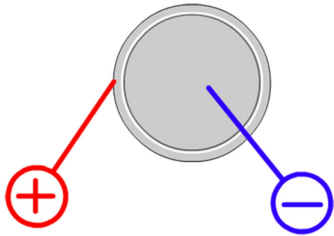


Battery	395
Voltage	1.55 V

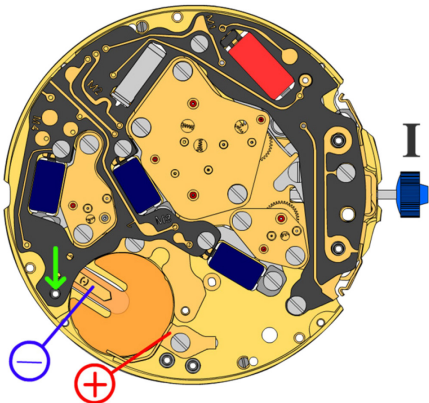


*Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:*


Typical consumption	1.48 μA
Maximal consumption	2.00 μA
Instantaneous rate	-10s/M. .. +20s/M.
Lower working voltage limit	1.30 V

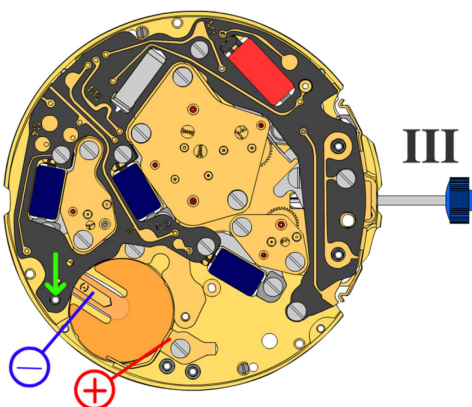

Setting stem in position III, 60 s measuring interval:

Typical consumption	0.10 μA
Maximal consumption	0.30 μA

 *Hold down the electrical module to allow the electronic flow.*

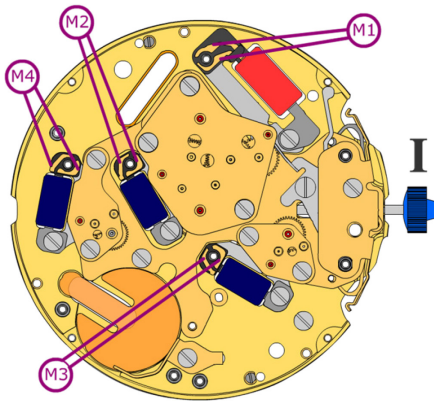


Coil resistance M1 **1.50 kΩ .. 1.70 kΩ**


Coil resistance M2 **2.20 kΩ .. 2.40 kΩ**

Coil resistance M3 **2.20 kΩ .. 2.40 kΩ**

Coil resistance M4 **2.20 kΩ .. 2.40 kΩ**

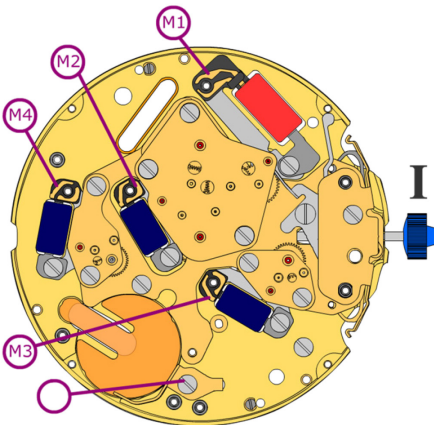

Coil isolation M1/M2/M3/M4 **∞ kΩ**

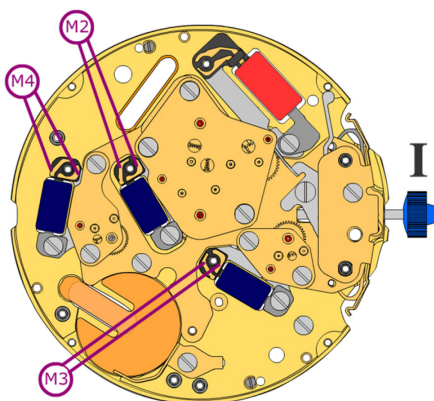

Signal generator (4.9 ms, 8 Hz):

Lower working voltage limit
M2/M3/M4 **1.30 V**