


### Specification

12 ½"

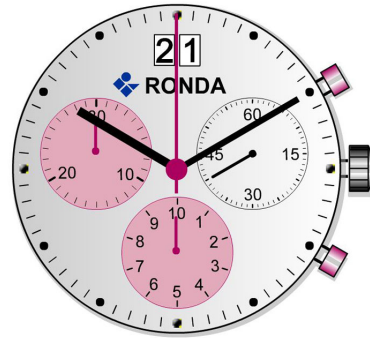

#### Dimensions and battery

|                         |                     |
|-------------------------|---------------------|
| ∅ Total                 | 28.60 mm            |
| ∅ Case fitting          | 28.00 mm            |
| Movement height         | 4.40 mm             |
| Movement rest           | 0.60 mm             |
| Height of stem          | 1.90 mm             |
| Stem: Thread / Distance | 0.90 mm / 0.90 mm   |
| Battery / Autonomy      | Nr. 395 / 48 Months |


#### Performances

|                           |                                  |
|---------------------------|----------------------------------|
|                           | Small second (M1): 4.0 - 6.7 µNm |
| Torque T                  | Minute hand (M1): 200 - 300 µNm  |
|                           | Counter (M2, M4): 3.0 - 4.6 µNm  |
|                           | Counter (M3): 1.5 - 2.5 µNm      |
| Operating temperature     | 0°C - 50°C                       |
| Res. against magn. fields | 18.8 Oe = 1500 A/m               |
| Resistance against shock  | NIHS 91 - 10                     |

#### Functions


|                      |   |
|----------------------|---|
| Position I (crown)   | Neutral                                 |
| Position II (crown)  | Setting the date (quick mode)           |
| Position III (crown) | Setting time and adjusting chrono hands |
| Pusher A             | START / STOP / ADD                      |
| Pusher B             | ZERO POSITIONING / SPLIT                |

### Assembling

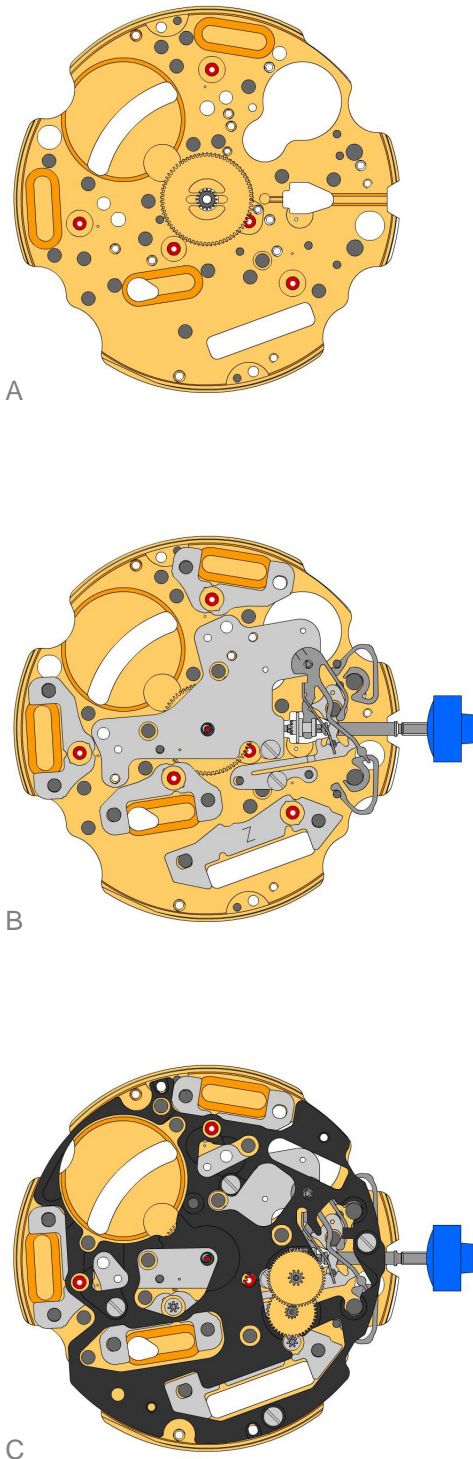

1. 2000.574.CO Main plate
2. 3305.275.CO Cannon pinion with driver (Aig 1)  
 Moebius 8200 grease must be placed between the steel tube and the brass wheel. The steel tube must be placed into the center hole of the main plate.
3. 2030.017.CO Centre bridge  
 Use one screw 4000.250 to fix the center bridge.
4. 3001.041 Sliding pinion  
 The sliding pinion must be holded using a tweezers, untill the stem is inserted.
5. 3000.177.CO Handsetting stem  
 Prior to the insertion of the stem, some grease must be placed on the square part of the stem.
6. 3017.049 Setting lever  
 The cam on the setting lever must be inserted into the cut out on the stem. (the setting lever must be greaced)
7. 3905.049 Setting lever jumper (3 positions)  
 The setting lever jumper (3 positions) must be tensioned and inserted into the setting lever. Use one screw 4000.250 to fix the setting lever.
8. 4000.250 Screw
9. 3015.076 Yoke (3 positions)  
 The yoke must be inserted below, into the cut out of the sliding pinion.
10. 3905.058 Yoke spring  
 The yoke spring must be positioned on the yoke. The opposite end of the yoke must be positioned around the pillar of setting lever. Use Moebius 8200 to grease the yoke.
11. 3406.030 Pusher jumper  
 2 pieces. Use Jismaa 124 to greace the pusher jumper.
12. 3622.040 Stator
13. 3622.039 Stator (counter 6h and 9h and chrono)  
 3 pieces
14. 3603.065 Plastic bracket  
 Use 4 screws 4000.250
15. 4000.250 Screw
16. 3715.094.RK Rotor (centre and chrono)  
 Use an antimagnetic tweezers to place the 2 rotors.
17. 3147.046.CO Intermediate wheel
18. 3136.142.CO Second wheel (long)

### Assembling

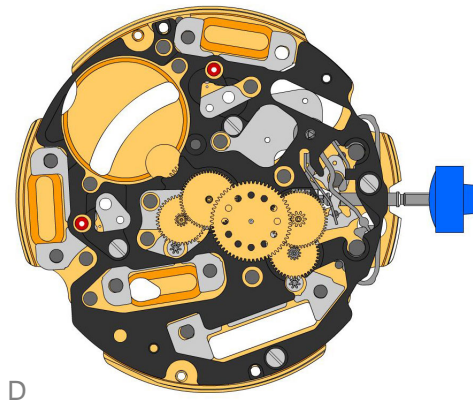

19. 3147.047.CO Intermediate wheel (chrono)



20. 3136.143.CO Chronograph wheel (Aig 1)



21. 3122.056.CO Third wheel



22. 2020.148 Train wheel bridge



Attention: Prior to the fastening process of the bridge, all 7 pins of the wheels must be visible in the 7 holes in the bridge. Use 3 screws 4000.250.

23. 3715.095.RK Rotor (counter 6h and 9h)



Use an antimagnetic tweezers to place the rotor.

24. 3147.048.CO Intermediate wheel (counter)



25. 3402.006.CO Minute counting wheel



26. 2020.149 Counter train wheel bridge



Attention: Prior to the fastening process of the bridge, all 4 pins of the wheels must be visible in the 4 holes of the bridge. Use 3 screws 4000.250.

27. 3715.095.RK Rotor (counter 6h and 9h)



Use an antimagnetic tweezers to place the rotor.

28. 3147.053.CO Intermediate wheel (counter 1/10sec)



29. 3402.009.CO Counting wheel 1/10 sec





30. 2020.149 Counter train wheel bridge




Attention: Prior to the fastening process of the bridge, all 4 pins of the wheels must be visible in the 4 holes of the bridge. Use 3 screws 4000.250.


31. 4000.250 Screw

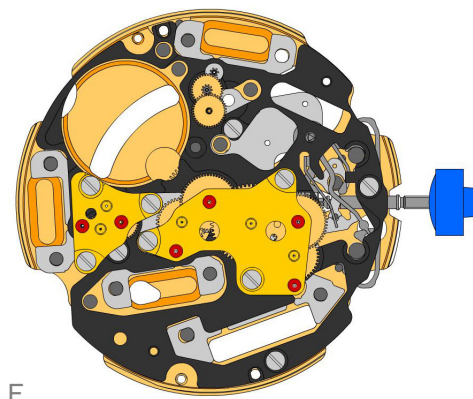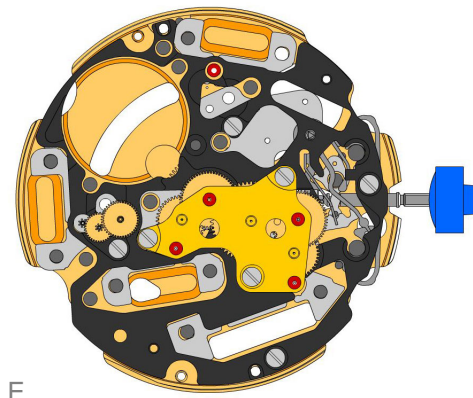


### Assembling

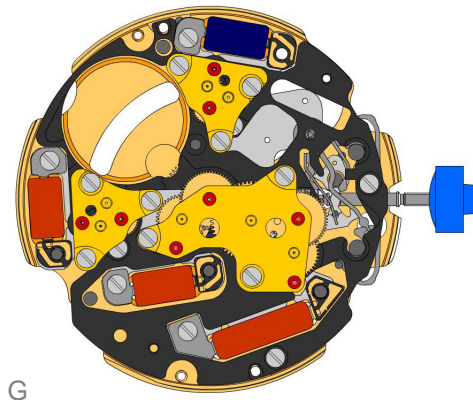

- 32. 9014.000 **Moebius 9014**  
 Use Moebius 9014 on bearing of all rubis
- 33. 3621.053.RK **Coil**  
 The wire of the coil (red area) is very sensitiv to mechanical impacts. Hold the coil only outside the red area. Fix the coil by 1screw 4000.250.
- 34. 3621.054.RK **Coil (counter 9h and chrono)**  
 The wire of the coil (red area) is very sensitiv to mechanical impacts. Hold the coil only outside the red area. Fix each of the 2 coils by 1screw 4000.250.
- 35. 3621.055.RK **Coil (counter 6h)**  
 The wire of the coil (blue area) is very sensitiv to mechanical impacts. Hold the coil only outside the blue area. Fix the coil by 1screw 4000.250.
- 36. 4000.250 **Screw**

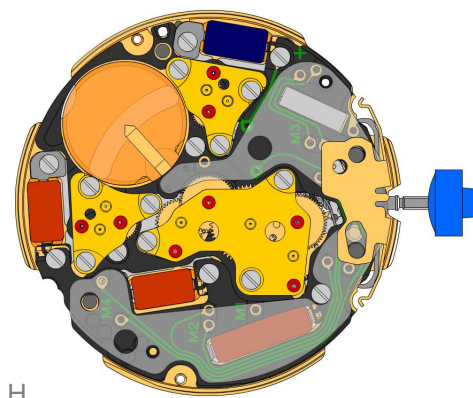


- 37. 3603.034 **Battery insulator**
- 38. 3612.144.5040 **Electronic module**  
 After assembly of the electronic module it is the best time to perform the electrical measurements. Use 5 screws 4000.248 to fix the electronic module.
- 39. 4000.248 **Screw**
- 40. 3603.069 **Circuit insulator**
- 41. 3601.107 **Pusher contact spring**  
 Make shure, that the pusher contact spring is placed correctly onto the pillars.

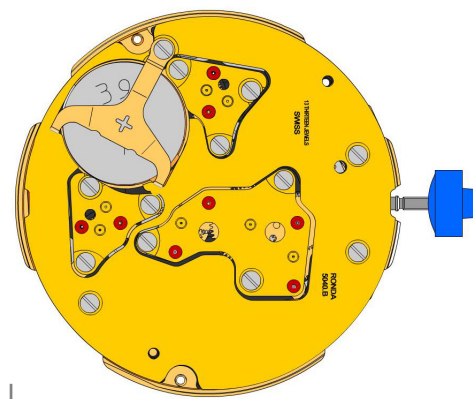

- 42. 2130.137.5040.B **Electronic module cover (counter 6h/9h)**  
 Make shure, that the pusher contact spring is not displaced during attachment of the electronic module cover. Use 3 screws 4000.250 to fix the electronic module cover
- 43. 3600.010 **Battery**  
 Use a plastic tweezers to place the battery (to avoid short circuit of battery).
- 44. 3601.109 **Bridle +**  
 Insert the two brackets of the battery bridle under the electronic module cover and fasten the battery bridle by 1 screw 4000.250.
- 45. 4000.250 **Screw**

### Assembling

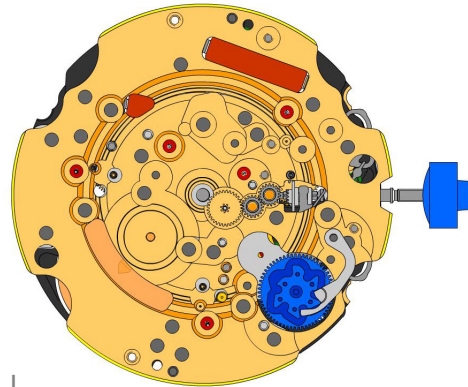

46. 2000.574.CO Main plate



47. 9014.000 Moebius 9014  
 Use Moebius 9014 on bearing of all rubis



48. 3004.164 Setting wheel  
 Use Moebius 9020 on both setting wheels



49. 3007.054.CO Minute wheel  
 Use Moebius 9020



50. 2130.143 Minute train bridge  
 Use 2 screws 4000.305



51. 4000.305 Screw



52. 3004.181 Tens indicator driving wheel  
 The short tooth of the tens indicator driving wheel must point to the center of the movement.



53. 3500.059 Tens jumper  
 Moebius 8200 greace must be placed between the tens jumper and the tens indicator driving wheel.



54. 2130.142 Tens jumper maintaining plate  
 Make shure, that the tens indicator driving wheel is not blocked prior to the fastening process. Use 2 screws 4010.306. Place the spring loaded bracket outside of the tens jumper.



55. 4010.306 Screw



56. 3301.241 Hour wheel (Aig 1)  
 Use Moebius 9020




57. 3315.016 Hour wheel friction spring  
 Must be placed onto the hour wheel




58. 3004.176.CO Date indicator driving wheel  
 Moebius 9020 must be used in the center of this wheel




59. 3500.049 Date jumper  
 Moebius 8200 greace must be placed between the date jumper and the date jumper spring

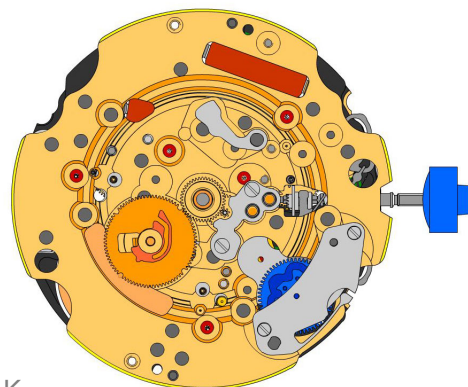



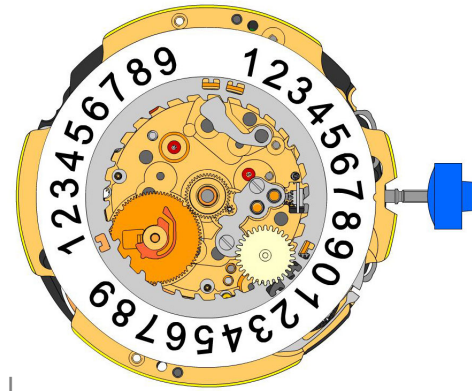



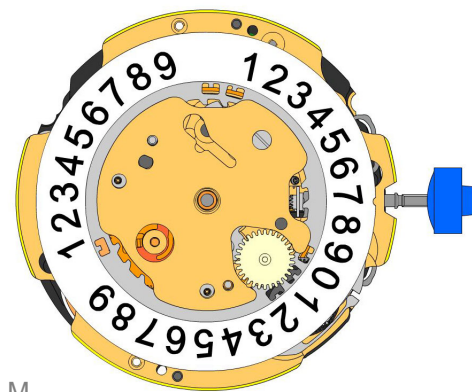

### Assembling



L




M


- |     |   |  |
|-----|---|--|
| 60. | 3504.214.AF   | <b>Units indicator</b><br>Teaths must be greaced using Moebius 8200. The "half moon" cut out on the unit indicator must point to the stem (position 3h).   |
|     |    |  |
| 61. | 3147.054  | <b>Tens intermediate wheel</b>   |
|     |    |  |
| 62. | 2130.141  | <b>Date indicator maintaining plate</b><br>Use 1 screw 4000.250  |
|     |    |  |
| 63. | 3905.050  | <b>Date jumper spring</b><br>Insert the spring into the opening of the date indicator maintaining plate  |
|     |    |  |
| 64. | 3504.216.AF   | <b>Tens indicator (T3/G12)</b><br>The "half moon" cut out on the tens indicator must point to the stem (position 3h).  |
|     |    |  |
| 65. | 2130.140  | <b>Date mechanism maintaining plate</b><br>Assure that the tens intermediate wheel is not blocked, prior to the fastening process. Use 2 screws 4000.250 to fix the date indicator maintaining plate |
|     |    |  |
| 66. | 3506.072  | <b>Dial support</b>  |
|     |  |  |
| 67. | 4000.250  | <b>Screw</b>   |
|     |  |  |
| 68. | 9010.000  | <b>Moebius 8200</b><br>Microgliss D5 can be used   |
|     |  |  |
| 69. | 9018.000  | <b>Jismaa 124</b><br>Greace Moebius or Microgliss D5 an be used  |
|     |  |  |
| 70. | 9020.000  | <b>Moebius 9020</b>  |
|     |  |  |

### Electrical checking


#### Voltage of battery

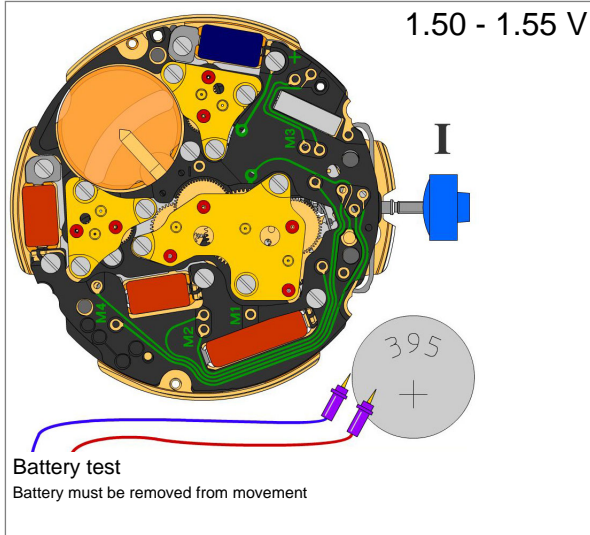


#### Consumption (M1) of movem. (Pos. I)

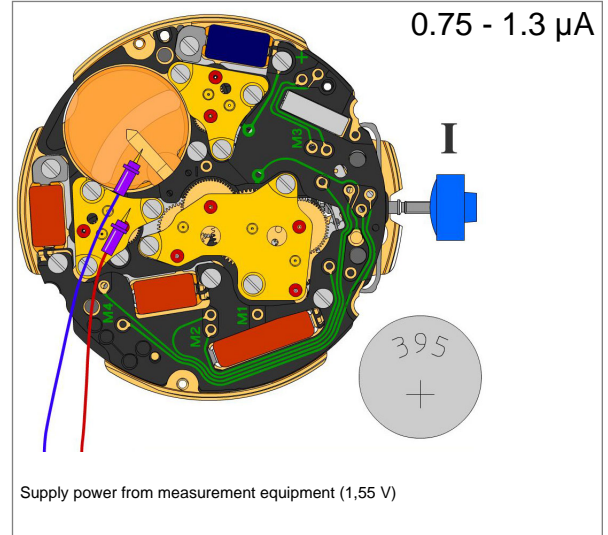


#### Consumption (M1) of movem. (Pos. III)

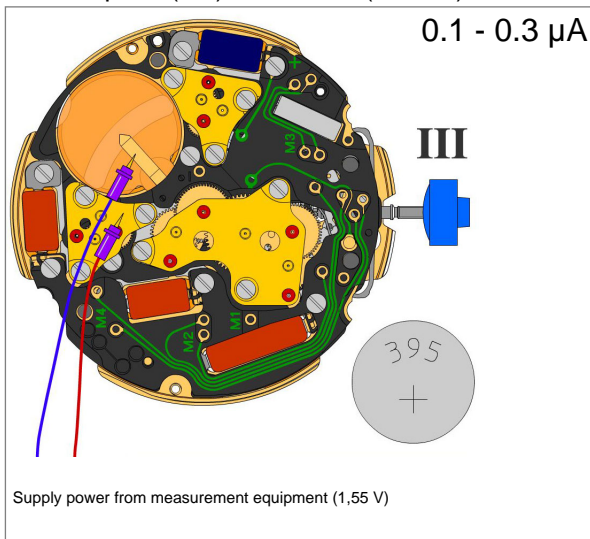


#### Lowest voltage for movement (M1)

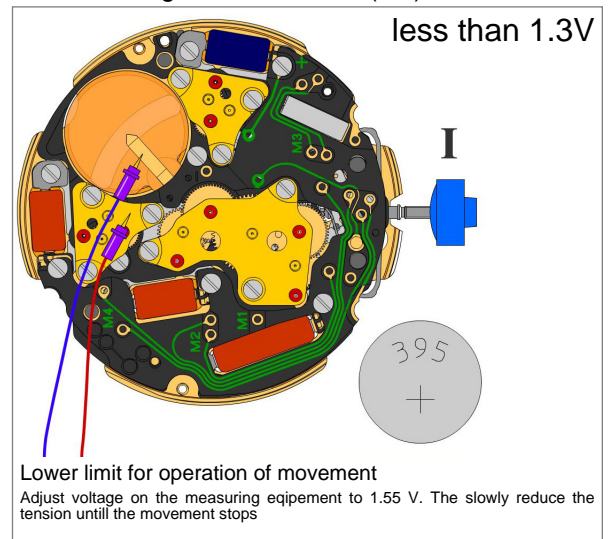

#### Accuracy (seconds / month)

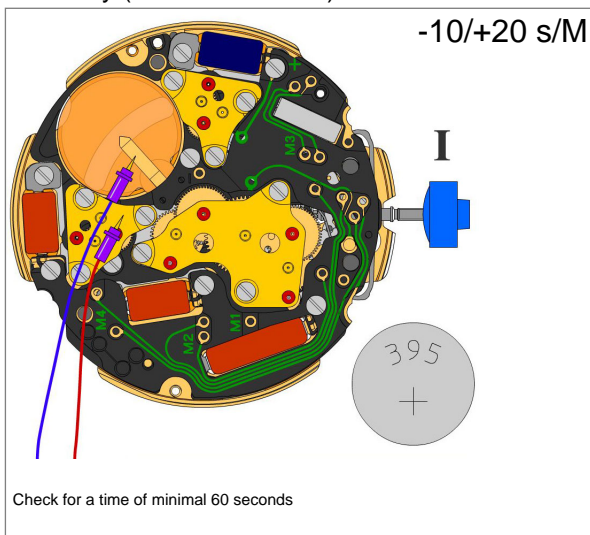


#### Resistance of the coil: motor 1 (movem.)

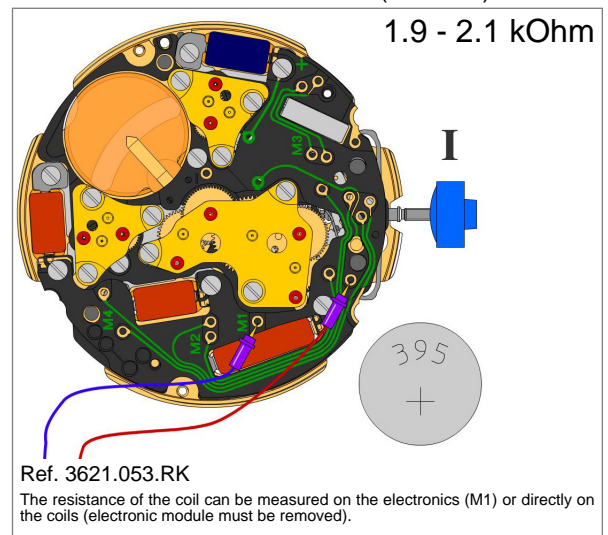

### Electrical checking

#### Resistance of the coil: motor 2 (counter)


2.2 - 2.4 kOhm

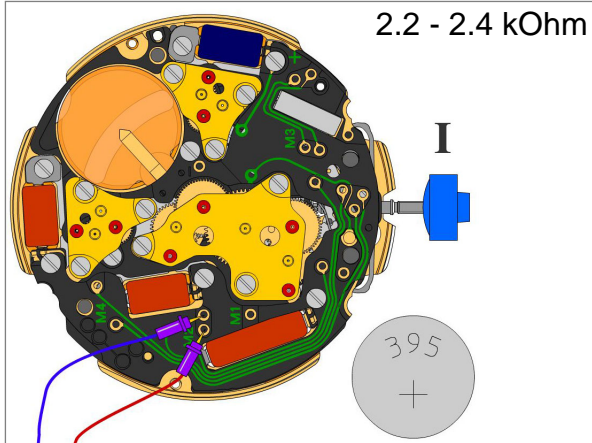

Ref. 3621.054.RK  
 The resistance of the coil can be measured on the electronics (M2) or directly on the coils (electronic module must be removed).

#### Resistance of the coil: motor 3 (counter)


2.2 - 2.4 kOhm

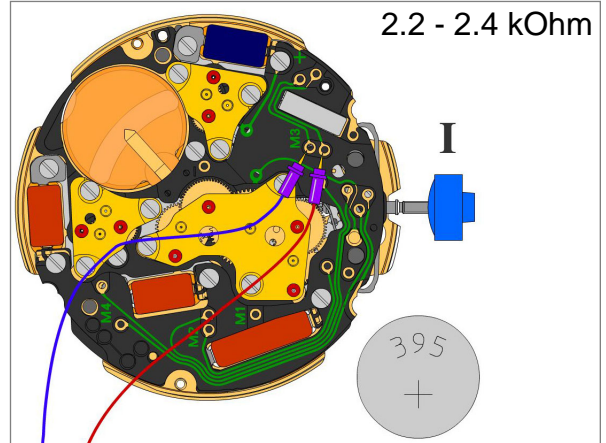

Ref. 3621.055.RK  
 The resistance of the coil can be measured on the electronics (M3) or directly on the coils (electronic module must be removed).

#### Resistance of the coil: motor 4 (counter)


2.2 - 2.4 kOhm

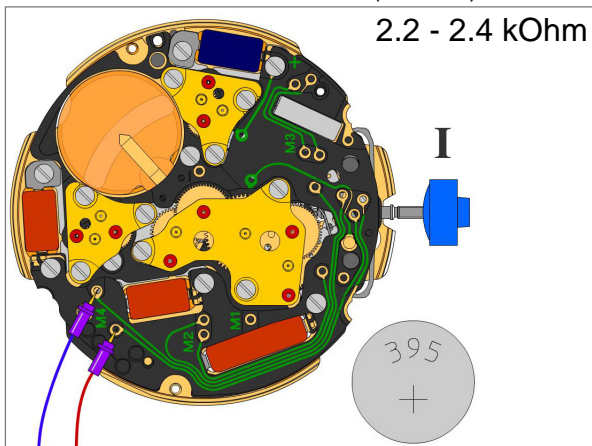

Ref. 3621.054.RK  
 The resistance of the coil can be measured on the electronics (M4) or directly on the coils (electronic module must be removed).

#### Coil insulation: motor 1, 2, 3 and 4

... kOhm

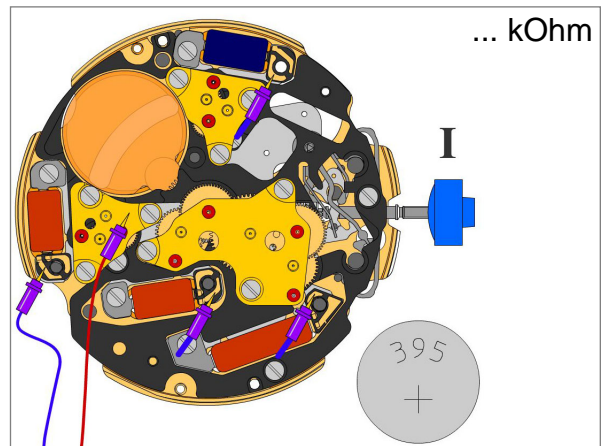


indefinite high  
 The resistance between each coil and +pole must be measured (electronic module must be removed)



### Test of the motors


#### Accelerated test of movement (M1)

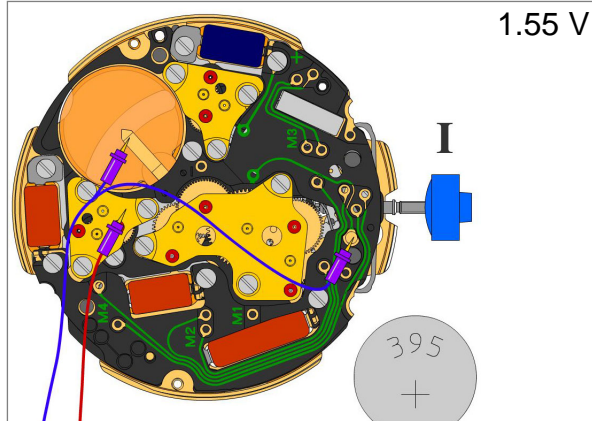

1.55 V


8 steps / sec.  
 To activate this test mode, the corresponding test point must be connected to the -Pole

#### 1. Activation of control mode (pos III)

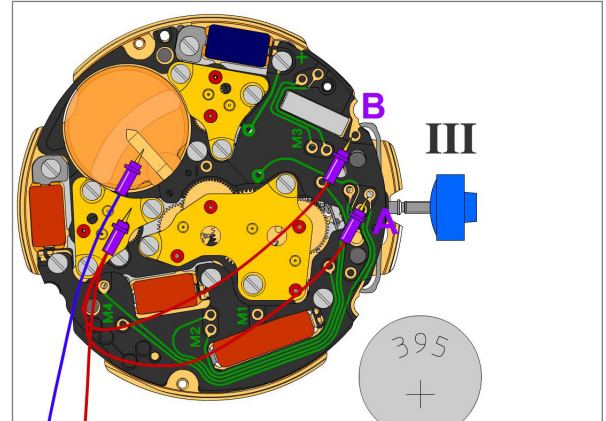

During 1-3 the movement must be supplied continuously  
 Connect points A + B simultaneous for min. 2 seconds to the +Pol. Do not interrupt the supply voltage - stem pos III)


#### 2. Check of active counter

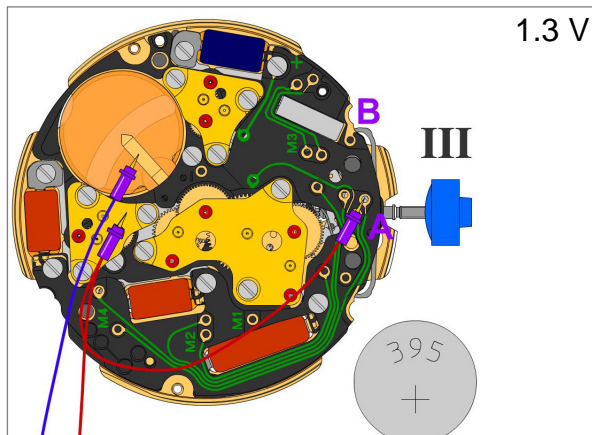

1.3 V

During connection of +Pol to A, the active counter is turning.  
 Reduced the supply voltage to 1.3V to check the proper function of the counter.  
 If the power supply is disconnected, the control mode must be started again - section 1.

#### 3. Change to the next counter

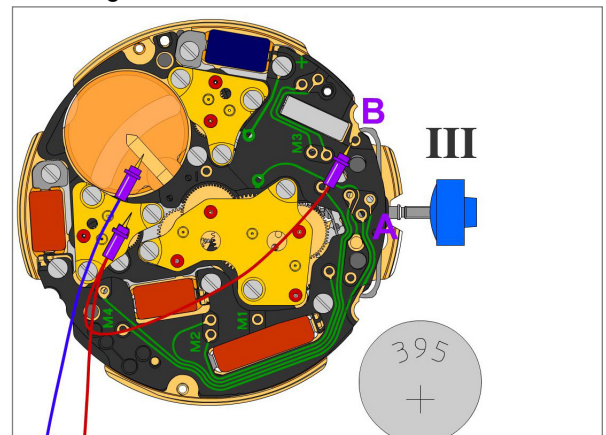

Short contact with +pole to point B  
 Change of active counter: M2-M3-M4-M2-M3- .After a timeout of approx. 30 seconds since last contact, the control mode will be terminated.